

18 INCH HIGH VELOCITY FLOOR FAN MODEL NO: CFF18B100

PART NO: 3231530

OPERATION & MAINTENANCE INSTRUCTIONS C E 🕱



LS0917 - ISS 1

INTRODUCTION

Thank you for purchasing this CLARKE 18 inch High Velocity Floor Fan.

Before attempting to use this product, please read this manual thoroughly and follow the instructions carefully. In doing so you will ensure the safety of yourself and that of others around you, and you can look forward to your purchase giving you long and satisfactory service.

GUARANTEE

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

ENVIRONMENTAL RECYCLING POLICY



Through purchase of this product, the customer is taking on the obligation to deal with the WEEE in accordance with the WEEE regulations in relation to the treatment, recycling & recovery and environmentally sound disposal of the WEEE.

In effect, this means that this product must not be disposed of with general household waste. It must be disposed of according to the laws governing Waste Electrical and Electronic Equipment (WEEE) at a recognised disposal facility.

ELECTRICAL CONNECTIONS



WARNING! Read these electrical safety instructions thoroughly before connecting the product to the mains supply.

Before switching the product on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This product is designed to operate on 230VAC 50Hz. Connecting it to any other power source may cause damage.

This product may be fitted with a non-rewireable plug. If it is necessary to change the fuse in the plug, the fuse cover must be refitted. If the fuse cover becomes lost or damaged, the plug must not be used until a suitable replacement is obtained.


If the plug has to be changed because it is not suitable for your socket, or due to damage, it should be cut off and a replacement fitted, following the wiring instructions shown below. The old plug must be disposed of safely, as insertion into a mains socket could cause an electrical hazard.



WARNING! The wires in the power cable of this product are coloured in accordance with the following code: Blue = Neutral Brown = Live Yellow and Green = Earth

If the colours of the wires in the power cable of this product do not correspond with the markings on the terminals of your plug, proceed as follows.

- The wire which is coloured **Blue** must be connected to the terminal which is marked **N** or coloured **Black**.
- The wire which is coloured **Brown** must be connected to the terminal which is marked **L** or coloured **Red**.
- The wire which is coloured **Yellow and Green** must be connected to the terminal which is marked **E** or ↓ or coloured **Green**.

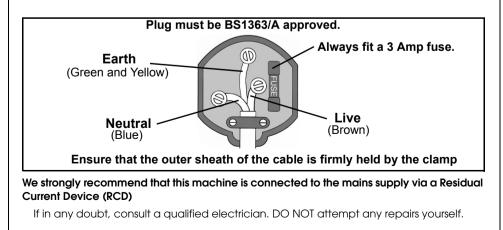

SAFETY PRECAUTIONS

- **DO NOT** use in dusty environments.
- Indoor use only.
- DO NOT use in environments with high fumes from chemicals etc.
- DO NOT use as an extractor fan.
- **DO NOT** use in areas of high humidity/water vapour, i.e. bathrooms etc.
- **DO NOT** connect fan to ducting system.
- **DO NOT** cover the fan with clothing or any material that will restrict free airflow throught the fan
- Never touch the blades with your hand or any object.

OPERATION

TILTING THE FAN


You can adjust the angle of the fan by holding the base and grill and tilting the fan to the required angle.

• Tighten the nuts on the side of the fan slightly if the fan will not stay in position

ADJUSTING THE SPEED

Press the relevant button to select the fan speed required

- Button 0 Off
- Button 1 950 rpm
- Button 2 1080 rpm
- Button 3 1250 rpm

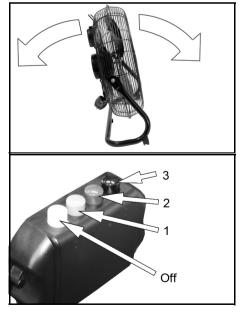


MAINTENANCE



- The motor bearings are permanently sealed and do not require any additional lubrication.
- Have any repairs carried out by a suitably qualified person.

CLEANING

- 1. Disconnect the power cord from the mains.
- 2. Lift the guard clips and remove the single bolt and nut at the bottom of the guard.
- 3. Remove the guard carefully.
- 4. Wipe the fan blades with dry cloth.
 - Never use polish or any corrosive liquid that will damage the finish.
 - Do not bend the blades!

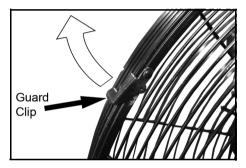


- 5. Replace the guard so that the bolt holes in the front and rear guard line up and lock the guard securely before use.
 - Make sure that the guard clips are returned to the locked position.

SPECIFICATIONS


Voltage:		230 V AC (50Hz)	
Wattage:		100 W	
Fan Speeds		3	
	Setting 1	950 RPM	
	Setting 2	1080 RPM	
	Setting 3	1250 RPM	
Dimensions (D x W x H):		215 x 547 x 535 mm	
Weight:		5.15 kg	
Maximum Fan flow Rate (m ³ /min)		156.43 (m ³ /min)	
Fan Power Input (W)		104.4 W	
Service Value (m ³ /min) / (W)		1.50 (m ³ /min) / (W)	
Sound Power level: dB LWa (Directive 2009/125	65.47 dB		
Maximum Air Velocity (m/ s)	4.17 m/s		
Seasonal Electricity consumption (kWh/annum)		33.41 kWh/annum	
Measurement standard for service value		IEC 60879:1986 (corr.1992)	
Contact details for obtaining more information		Clarke International Hemnall Street, Epping, Essex CM16 4LG, England	

PART LIST AND DIAGRAM

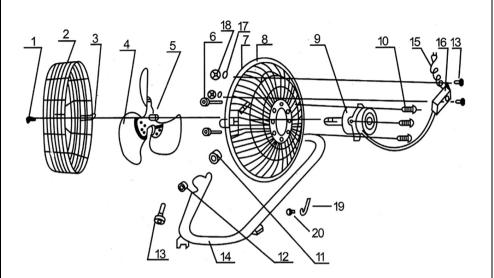

No	DESCRIPTION	PART NUMBER	No	DESCRIPTION	PART NUMBER
1	Screw	KWCFF18B10001	11	Plastic Bearer	KWCFF18B10011
2	Front Guard	KWCFF18B10002	12	Locknut	KWCFF18B10012
3	Guard Clips	KWCFF18B10003	13	Screw	KWCFF18B10013
4.	Blade	KWCFF18B10004	14	Tube Base	KWCFF18B10014
5	Set Screw	KWCFF18B10005	15	Power Cord	KWCFF18B10015
6	Nut	KWCFF18B10006	16	Control Box	KWCFF18B10016
7	Square Bolt	KWCFF18B10007	17	Washer	KWCFF18B10017
8	Rear Guard	KWCFF18B10008	18	Nuts	KWCFF18B10018
9	Motor	KWCFF18B10009	19	Carry Handle	KWCFF18B10019
10	Screw	KWCFF18B10010	20	Screw	KWCFF18B10020

DECLARATION OF CONFORMITY

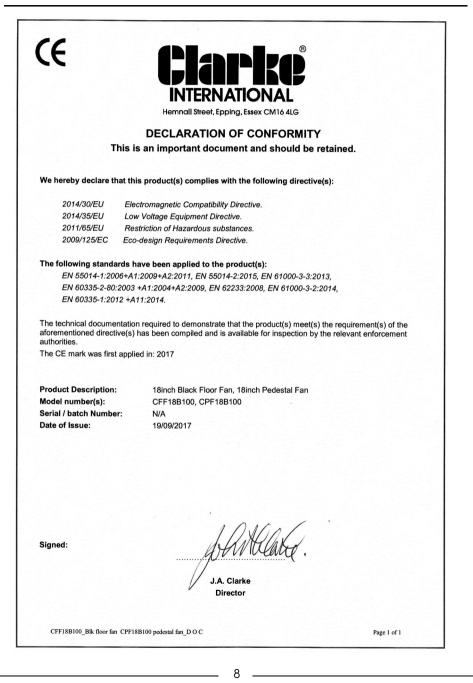

Parts & Service: 020 8988 7400 / E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com