

INSTALLATION GUIDE RAINWATER FILTER KIT C

ENDURAMAXX[®]
FLUID MANAGEMENT INNOVATION

www.enduramaxx.co.uk
THE UK'S LEADING MANUFACTURER
OF LIQUID STORAGE PRODUCTS

sales@enduramaxx.co.uk
01778 562810

ENDURAMAXX[®]
FLUID MANAGEMENT INNOVATION

www.enduramaxx.co.uk



INSTALLING YOUR RAINWATER FILTER KIT CORRECTLY

Congratulations on your purchase of an Enduramaxx Rainwater Filter Kit.

Correct installation and regular maintenance should provide trouble free service for many years.

Please follow these instructions carefully as correct installation is the sole responsibility of the purchaser.


CONTENTS OF RAINWATER FILTER KIT C

- Twin Filter with lid
- Overflow siphon tube
- Calmed inlet
- Enough pipe to go from the bottom of the filter to the bottom of the tank (calmed inlet)



INSTALLATION STEPS - KIT C

- 1 Locate the tank into position and identify where you would like the filter to sit in relation to current pipe work on the building.
- 2 Ensure the pipes entering the filter have a shallow incline in order to allow water to flow over the weir within the filter.
- 3 Mount the filter to the wall as photo A.
- 4 Decide whether you would like to use the hole from the screw lid on the water tank or whether you would be better to drill a purpose made hole to the side of the screw lid.
- 5 A typical point would be at the letter 'C' as illustrated right.
- 6 Drill a 4" round hole at your point 'C'.
- 7 Put the drainage pipe through the hole.
- 8 With the aid of the inspection screw lid put the calmed inlet on the end of the pipe.
- 9 Continue to lower the pipe until the calmed inlet is touching the base of the tank.
- 10 Insert the filter unit onto the top of the pipe.
You will have something like the illustration shown on the right...
- 11 The purpose of the siphon tube is to siphon away any floating algae from the top of the water. It should therefore be fitted as high as possible on the tank wall.
- 12 Drill a 4" hole, remove the plastic nut and insert the siphon tube through from the inside of the tank.
- 13 With the aid of the inspection screw lid put the calmed inlet on the end of the pipe.
- 14 With the nut – tighten up from outside the tank.
- 15 Silicone around where any pipe and fittings come out of the tank.

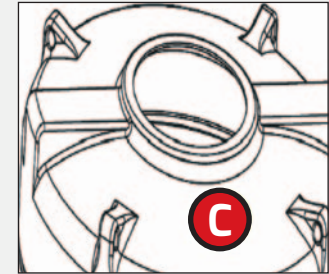

WE'RE
HERE TO
HELP
CALL US
01778
562810

Further pipe and fittings may be required to finish connecting the unit to existing drainpipes and also drainage to a soakaway etc.

OUR SIMPLE, RELIABLE AND AFFORDABLE RAINWATER SYSTEMS ARE ALL BACKED BY THE ENDURAMAXX SOLID GUARANTEE

IF YOU HAVE ANY QUESTIONS REGARDING THE OPERATION OR WARRANTY OF THIS PRODUCT, PLEASE CONTACT US DIRECT ON THE NUMBER ABOVE, OR EMAIL US

sales@enduramaxx.co.uk | 01778 562810

ENDURAMAXX®
FLUID MANAGEMENT INNOVATION

www.enduramaxx.co.uk

